Quick Start Guide

Speechi
Interactive solutions

WARNING


- Brfore using, read the " Quick Start Guide " and the owner's manual to ensure correct usage through understanding.
- After reading, store them in a safe place for future reference.
- Do not look into the lens while the projector's power is turned on.
- Do not put something close the lens when power on the projector, it may damage the projector or may cause fire hazard.

S/N: 13350811


Package Overview

Unpack and inspect the box contents to ensure all parts listed below are in the box. If something is missing, please contact your nearest customer service center.


Projector

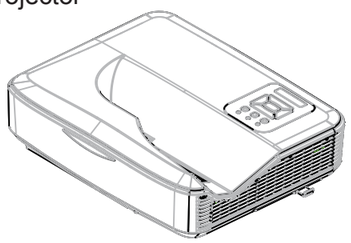


AC Power cord



HDMI cable



Quick start guide




User's Manual (CD)



Remote control with batteries





Optional Touch Curatin
(for SPE-VPI-360-LAS-W-I-T)*



Installation

WXGA series: Projection Image Size from 85" to 115" (2.16 to 2.92 meters).

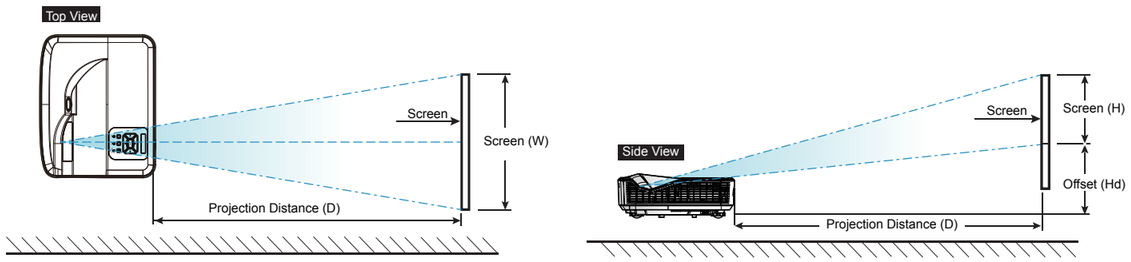

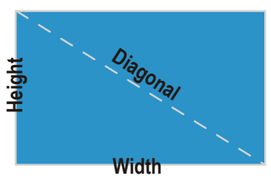


Diagonal length (inch) size of 16:10 Screen	Screen Size W x H				Projection Distance (D)				Offset (Hd)	
	(cm)		(inch)		(cm)		(inch)			
	Width	Height	Width	Height	wide	tele	wide	tele	(cm)	(inch)
85	183.1	114.4	72.1	45.0	23.3	NA	9.2	NA	25.4	10.0
87	187.4	117.1	73.8	46.1	24.4	NA	9.6	NA	25.9	10.2
90	193.9	121.2	76.3	47.7	26.1	NA	10.3	NA	26.5	10.4
95	204.6	127.9	80.6	50.4	29.0	NA	11.4	NA	27.7	10.9
100	215.4	134.6	84.8	53.0	31.8	NA	12.5	NA	28.8	11.3
105	226.2	141.4	89.1	55.7	34.7	NA	13.7	NA	30.0	11.8
110	236.9	148.1	93.3	58.3	37.5	NA	14.8	NA	31.0	12.2
115	247.7	154.8	97.5	60.9	40.4	NA	15.9	NA	32.2	12.7

❖ This table is for user's reference only.

Powering On the Projector

1. Securely connect the power cord and signal cable. When connected, the POWER/STANDBY LED will turn Orange.
2. Turn on the lamp by pressing "⏻" button either on the projector or on the remote. At this moment, the POWER/STANDBY LED will now turn Blue.❶ The startup screen will display in approximately 10 seconds. The first time you use the projector, you will be asked to select the preferred language and power saving mode.
3. Turn on and connect the source that you want to display on the screen (computer, notebook, video player, etc). The projector will detect the source automatically. If not, push menu button and go to "OPTIONS". Make sure that the "Source Lock" has been set to "Off".
   - ❖ *If you connect multiple sources at the same time, press the "INPUT" button on the control panel or direct source keys on the remote control to switch between inputs.*

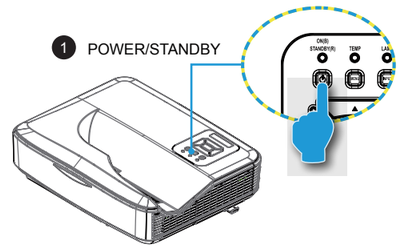


Adjusting the Projected Image

Adjusting the Projector's Height

The projector is equipped with elevator feet for adjusting the image height.


1. Locate the adjustable feet you wish to modify on the underside of the projector.
2. Rotate the adjustable ring clockwise to raise the projector or counter clockwise to lower it. Repeat with the remaining feet as needed.

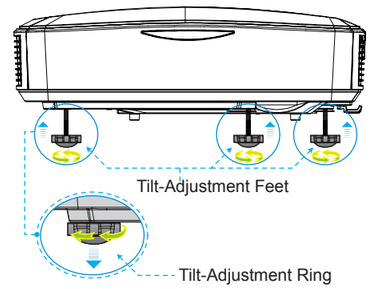

Adjusting the Projector's Focus


To focus the image, slide the focus lever to left/right until the image is clear.

- WXGA series: The projector will focus at distances from 1.59 to 2.16 ft. (0.49 to 0.66 meter).

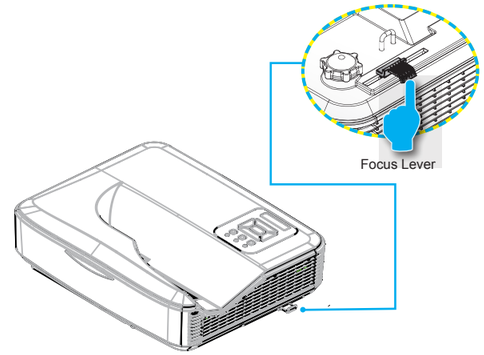

Powering Off the Projector

1. Press the "⏻" button on the remote control or on the control panel to turn off the projector. The following message will be displayed on the screen.

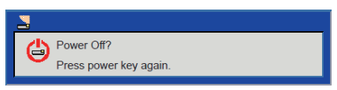

Press the "⏻" button again to confirm otherwise the message will disappear after 10 seconds. When you press the "⏻" button for the second time, the fan will start cooling the system and will shut down.

2. The cooling fans continue to operate for about 4 seconds for cooling cycle and the POWER/STANDBY LED will flash Orange. When the POWER/STANDBY LED lights solid Orange, the projector has entered standby mode.


   If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press "⏻" button to restart the projecto

3. Disconnect the power cord from the electrical outlet and the projector.

Connecting the Projector

⚠ Unplug the power cords of both the projector and external equipment from the AC outlet before connecting the cables.


Connect to Computer/Notebook

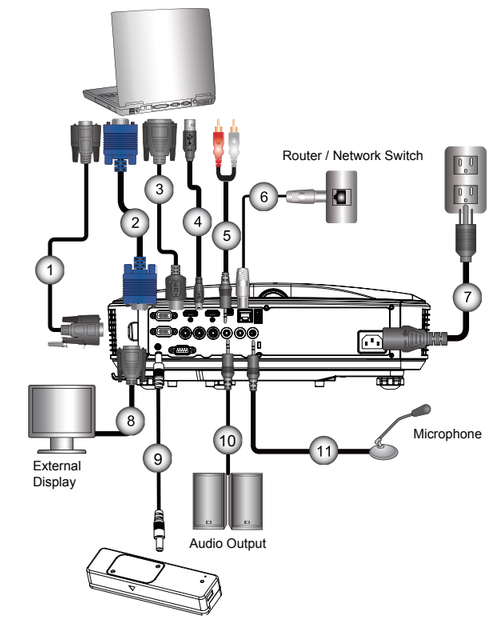

1. ..... *RS232 Cable
2. ..... *VGA Cable
3. ..... *HDMI Cable
4. ..... **USB Cable *(for Interactive Function model)*
5. ..... *Audio Cable/RCA
6. ..... *RJ45 Cable
7. ..... Power Cord
8. ..... *VGA Output Cable
9. ..... **DC to DC Cable *(for Interactive Function model)*
10. ..... *Audio Output Cable
11. ..... *Audio Input Cable

(*) Optional accessory (**) *Depend on Model.*

Connect to Video Sources

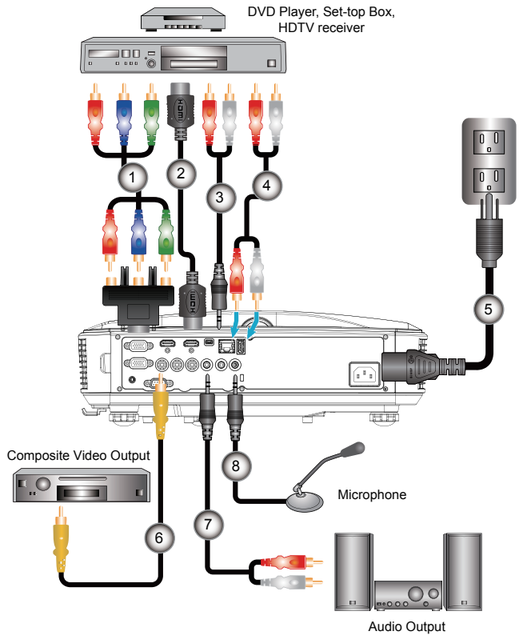


1. ..... *15-Pin to 3 RCA Component/HDTV Adaptor
2. ..... HDMI Cable
3. ..... *Audio Cable/RCA
4. ..... *Audio Cable
5. ..... Power Cord
6. ..... *Composite Video Cable
7. ..... *Audio Cable/RCA
8. ..... *Audio Input Cable


(*) Optional accessory

Installing the Optical Touch Curtain *(optional)*

- For short-term demonstration:
  The curtain with magnet. You can use it with magnetic whiteboard or other magnetic material on the mid-upper position of the projector screen.
- For long-term use:
  Use screws to fix base plate onto whiteboard or other smooth surface.

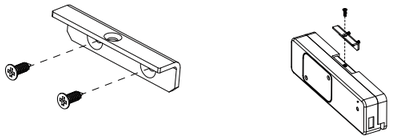


Install on the center of the projector screen. It needs 7 cm gap between Optical Touch Curtain and projector screen.

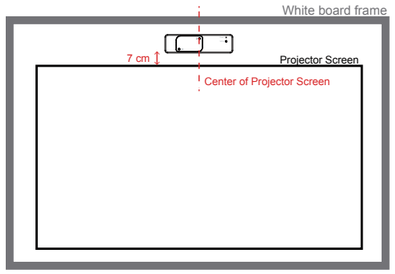


<Adjust>


1. When finish to setting the Optical Touch Curtain. Uses a USB cable to connect to the projector.After the machine has been connected, the ‘Power’ light will turn green. After pressing the ‘Setting’ button, the ‘Power’ light will turn red and enter installation mode.Press "Blank" on the Projector’s remote control and you will see the laser beam.

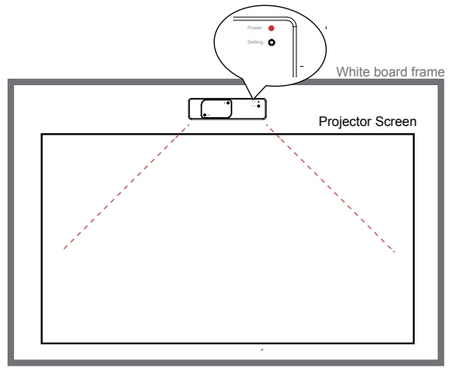


2. Please use a Slotted Screwdriver to turn the rotary knob ▲▼ in a clockwise direction all the way to the end. You will see the laser beam hit the screen. Adjust the knob ◀▶ accordingly to make the light parallel to the Curtain.

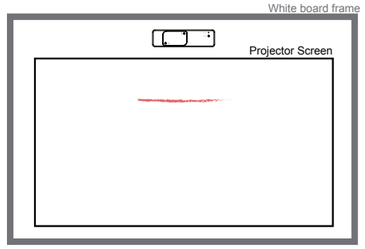

3. Adjust the rotary knob ▲▼ allows the laser beam to move down to the outside of the projection screen, making sure that the laser beam and Curtain are parallel.

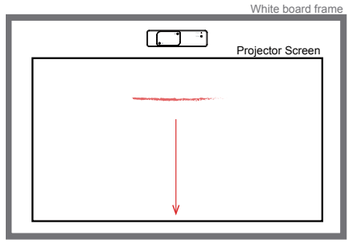

4. Confirm that the beam is a solid line at the bottom of the Curtain. If not, continue adjusting until the beam is a solid line.

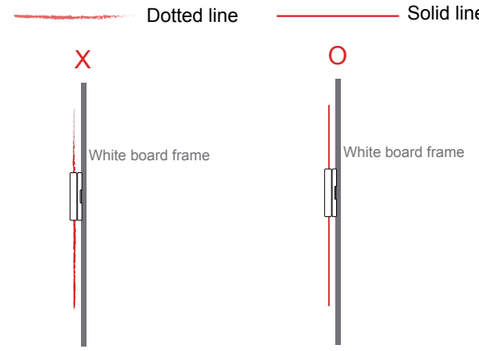


5. You can use Laser Card to make sure the beam is a solid line or not.
6. Press the ‘Setting’ button, where the ‘Power’ light will turn green. Revert back to using Touch Mode to start utilizing interactive features.

Warning Indicator

When the warning indicators (see below) come on, the projector will automatically shutdown:

- “LAMP” LED indicator is lit red and if “POWER/STANDBY” indicator flashes amber.
- “TEMP” LED indicator is lit red, this indicates the projectorhas overheated. Under normal conditions, the projector can be switched back on.
- “TEMP” LED indicator flashes red and if “POWER/STANDBY” indicator flashes amber.

Unplug the power cord from the projector, wait for 30 seconds and try again. If the warning indicator light up again, please contact your nearest service center for assistance.

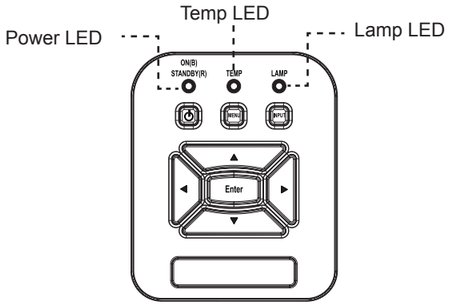

Troubleshooting

<Image Problems>

Q: No image appears on-screen.

A: 1.Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
2.Ensure the pins of connectors are not crooked or broken.
3.Check if the projection lamp has been securely installed.
4.Ensure that the “Blank screen” is not turned on.

<Projector Problems>

Q: The projector stops responding to all controls.

A: If possible, turn of the projector, then unplug the power cord and wait at least 30 seconds before reconnecting power .

Q: Lamp burns out or makes a popping sound.

A: When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced.

<Remote Control Problems>

Q: If the remote control does not work.

A: 1. Make sure there are not any obstructions between the remote control and the projector.
2.Make sure the batteries are inserted correctl
3.Replace batteries if they are exhausted.

<Sound Problems>

Q: If no sound from the projecto

A: 1.If you are playing an external source, make sure you have an audio cable securely connected between the source device and the projecto audio input
2.Please make sure the external speakers are not connected
3.Make sure the volume is not set to minimum.
4.Make sure the “ Volume --> Mute” function is set to “off ”.

Need Support ? Email : support@speechi.net